

K Strip

The finishing touch

Not recommended to be used above windows and doors.



The problem with weatherboards is they're difficult to line up. The builder's pencil, slippage and human error factors mean every board has to be checked individually, which takes a long time. Its time to throw away the story rods and wedges.

K Strips come in three types: direct fix, cavity fix and sheet fix. Direct fix and cavity fix K Strips are for weatherboards and Sheet fix K Strips are for fixing fibre cement or plywood panels.



direct fix



cavity fix



sheet fix

Ezyspacers

Spacing made easy

The Spacer is another huge time saver and works in conjunction with the K Strip on fibre cement panels that require negative detail.

In short, a Spacer is like a tile spacer but for sheets. It fixes onto the first sheet you've lined up on the K Strip and provides a perfectly square measurement. Plus they're removable and reusable saving 30 to 50% on labour costs.



'Fast Clad'

Hand Brackets

These simply clip onto the weatherboard you've just fixed and set the board above it perfectly parallel and at the correct angle and measurement.

All you need to do is fix the board to the wall and move on. No double and triple checking – the K Strip at the bottom ensures the accuracy of the first board and the Hand Bracket takes its measurements from that. It's virtually idiot-proof, so you can have your apprentice doing it without having to look over his shoulder.



Steps for Ezy Build 'Fast Clad' Hand Bracket (to use with Ezy Build 'K Strip' either Direct Fix or Cavity Fix)

1. Fix building wrap to the framing
2. Measure and fix Ezy Build 'K Strip' to the wall allowing for first weatherboard to have a minimum overhang of 50mm below the bottomplate (NZS3604)
3. Fix cavity battens to the framing (if required)
4. Apply glue to Ezy Build 'K Strip' install first weatherboard to Ezy Build 'K Strip' and fix to wall
5. One man either end of next weatherboard each with a 'Fast Clad' Hand Bracket
6. Clip Ezy Build 'Fast Clad' Hand Bracket under previous weatherboard and fix next weatherboard to wall.*Repeat until wall is finished. No more measuring!
7. Install premade scribes to windows and doors as all measurements are the same

Patented. New Zealand designed and made.

Available exclusively through **ITM Building Centres.**




For best results **Ezy Build Products** recommends **Selleys Liquid Nails Platinum.**




Technical help line

0800 EZYBUILD 399 284


www.ezybuild.co.nz

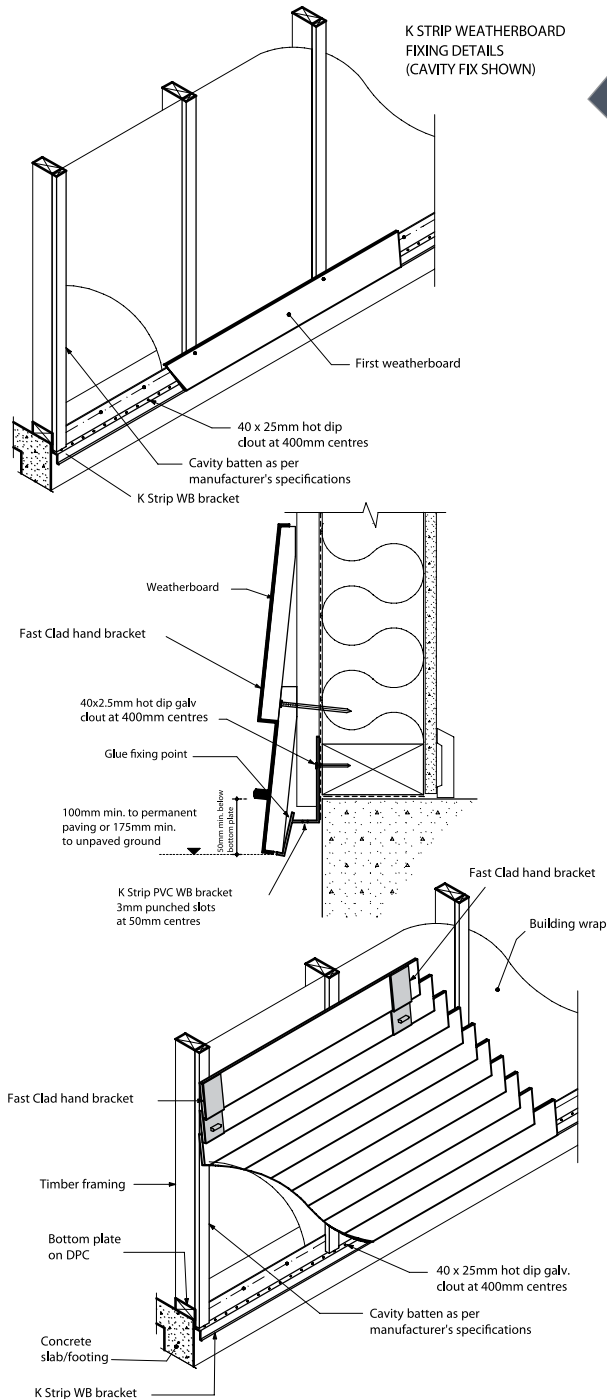

Cut cladding time by up to 50%

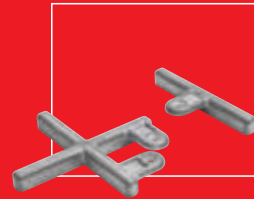

Ezy Spacers

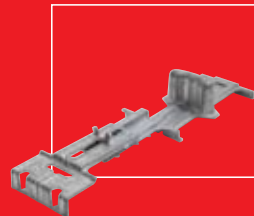

'Fast Clad' Hand Bracket

K Strip

EZY BUILD PRODUCTS
DESIGNED BY BUILDERS FOR BUILDERS